

Upgrade instructions for PR-D8 using SD card

Before upgrading the software, you must:

- 1. Disable all sleep/alarm settings.**
- 2. Insert both power sources (DC-IN and battery) to prevent upgrade failure due to power outage.**
- 3. If the upgrade fails, the radio will not be able to be upgraded again. It will have to be returned for repair. This type of failure is not included in the quality guarantee.**


STEP 1: download both upgrade software files, nemo.bin and Boot.sei. Store both files on your SD card and ensure there is no other *.bin or *.sei on the SD card.



STEP 2: Plug in DC power.



STEP 3: Insert your SD Card.

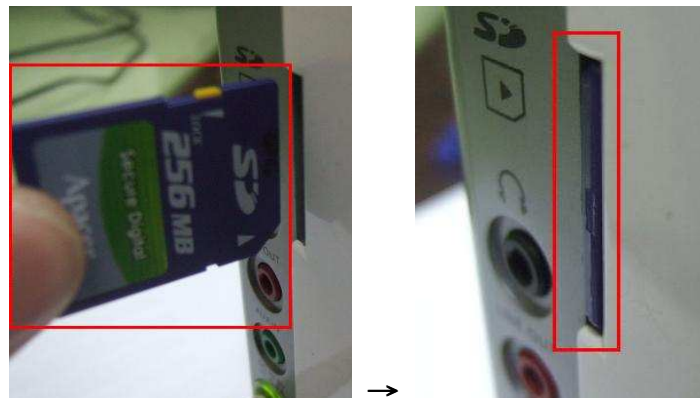


STEP 4: Press the Standby button to switch on your radio.



STEP 5: Press the BAND button to select the SD band and set the volume to about 1/3.



STEP 6: Press the SELECT button when the LCD displays "F/W Upgrade?" Make sure to press the button within 8 seconds.

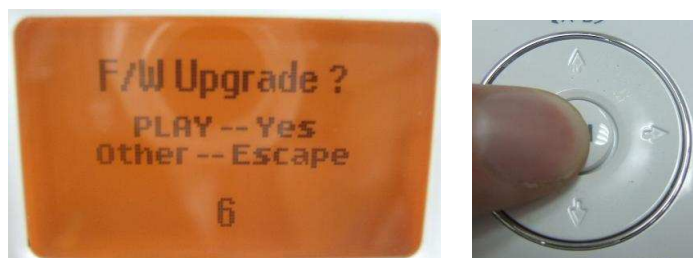

STEP 7: Once the upgrade procedure has begun, the speaker will beep 5 times. Upgrading the newest firmware into the SD band takes about 1 minute.

Note: During the upgrade process, never block out the DC power or press any buttons.



STEP 8:

When the upgrade procedure is complete, the speaker will beep continuously until you remove both battery sources (DC-in and battery).



STEP 9: Remove both power sources (DC-in and Battery).



and



STEP 10: Use your pc to remove the nemo.bin and Boot.sei files on your SD card.

STEP 11: Plug in DC power again. Congratulations, the firmware upgrade is complete.

1st Reminder:

info Check your firmware version by presses MENU → System setup→System

Version No.:V1.01b1105 (example)



2nd Reminder:

If your upgrade fails, the display will be empty. In this case you will have to send the product back your retailer for repair.

